

FRONT LOAD WASHING MACHINE









16 Washing Programs



My Cycle Feature



Delay Start Feature

ADDITIONAL FEATURES







Stainless Steel Drum



1–24 Hour Delay Start



My Cycle Feature

Important! Remove the Transport Bolts Before Using the Machine

Before using this washing machine, transport bolts must be removed from the backside of this machine. Please take the following steps to remove the bolts:

- 1 Loosen all bolts with spanner and then remove them.
- 2 Stop the holes with transport hole plugs.
- 3 Keep the transport bolts properly for future use.

Checklist Before Washing Clothes

Please read this section carefully to ensure proper use of the appliance and to avoid damaging your clothes.

- Check first if clothes will be damaged by determinent.
- Place your liquid detergent on a spare white towel and put this in contact with a hidden part of your colour clothing. Check if the towel takes on any of the colour.
- When washing scarves and other clothes that easily get decolorised, please wash them separately before washing.

Keep in Mind:

 Never leave clothes in the washing machine for prolonged periods of time, to avoid spotting and possible mould. The clothes also may get color changed or distorted if they are not washed according to the stated washing temperature.


Model Number	SFLW6
Warranty	3 years

For more information please call 1300 11 43 57 or visit www.stirlingappliances.com.au

Washing Clothes for the First Time

Before washing clothes, the washing machine should be operated once without clothes, as follows:

- 1 Connect power source and water.
- 2 Put a little detergent into the box and close.
- 3 Press the button "On/Off".
- 4 Press the button "Start/Pause". The drawer is separated as follows:
- I Pre-detergent or washing powder
- II Main detergent
- Washing additive/Fabric softener

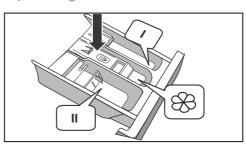

Load Capacity	6kg
Washing Programs	16

Version 1.2